
## **CGS-500.8 G**

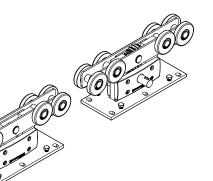

CGS-500.8 G

**GRANDE** 

10131502 001

97,00

USE: Carriages with integrated transmission for cantilever gates.

TYPE: 8 wheel Integrator Master & Slave carriages kit.


FIXING: Use 6 + 6 anchor bolts CG-348 M20 or appropriate anchors (both not supplied). For the dimensions of the concrete base, see table 1. The base allows height adjustment using the 4 M16 screws and the special counter-plate CG-05G.

MATERIAL: Electrolytically Galvanized Steel and Painted Aluminum.

RECYCLING: Dispose of the main structure (wheels, plates and pins) as ferrous material and the side protections as aluminum, according to the laws of the country of installation.


PARTS SUBJECT TO WEAR: Bearings, wheels and gears.

WARNINGS: The manufacturer reserves the right to change the characteristics of the product according to their needs without prior notice. The manufacturer is not liable for even partial modifications of the product and the declared performances are valid only if the installation methods indicated in the instructions and performed by qualified personnel are followed.

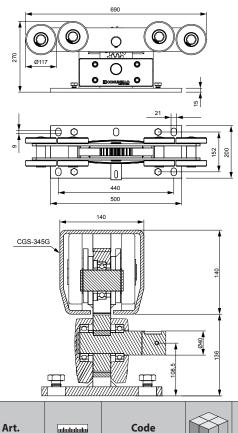



EN

TECHNICAL CHARACTERISTICS				
WEIGHT OF PART		112.2 Lbs + 101.2 Lbs. / 97 Kg (51 Kg + 46 Kg)		
CAPACITY (maximum force on the carriage axis), IT IS NOT THE WEIGHT OF THE GATE		F1 max 8800 Lb/f   4000 Kg/f		
COMBINABLE COMPONENTS		CGS-345G		
MAINTENANCE FREQUENCY				
BUSINESS	WAREHOUSE		CONDOMINIUM <20 UNITS	CONDOMINIUM >20 UNITS
2 YEAR*	1 YEAR*		6 MONTHS*	6 MONTHS*
Check the functionality and integrity of carriages.				
Clean lower area of contact between wheels and rail				
Make sure the carriages are integral with the concrete base				
Grease the gears with the appropriate grease (FIG.4)				
Check gears and racks wear				
Check fastening of the locking screws of the rack to the monorail				
*The scheme refers to a normal workplace (not marine or particularly aggressive environments).				
	BUSINESS  2 YEAR*  Check  Grease  Check fastening	WEIGHT OF PART  CITY (maximum force on the carriage IT IS NOT THE WEIGHT OF THE GATE COMBINABLE COMPONENTS  MAINTENANC  BUSINESS  VARE  2 YEAR*  1 YE  Check the functionality Clean lower area of contame Make sure the carriages are  Grease the gears with Check gears an Check fastening of the locking of the scheme refers to a normal was contame to the carriages are contament t	WEIGHT OF PART  CITY (maximum force on the carriage IT IS NOT THE WEIGHT OF THE GATE  COMBINABLE COMPONENTS  MAINTENANCE FREQUENCY  BUSINESS  WAREHOUSE  2 YEAR*  1 YEAR*  Check the functionality and integrity of Clean lower area of contact between whe Make sure the carriages are integral with the Grease the gears with the appropriate Check gears and racks wear  Check fastening of the locking screws of the raft The scheme refers to a normal workplace (not in the contact part of the scheme refers to a normal workplace (not in the contact part of the scheme refers to a normal workplace (not in the contact part of the scheme refers to a normal workplace (not in the contact part of the scheme refers to a normal workplace (not in the contact part of the scheme refers to a normal workplace (not in the contact part of the scheme refers to a normal workplace (not in the contact part of the scheme refers to a normal workplace (not in the contact part of the scheme refers to a normal workplace (not in the contact part of the scheme refers to a normal workplace (not in the contact part of the scheme refers to a normal workplace (not in the contact part of the scheme refers to a normal workplace (not in the contact part of the scheme refers to a normal workplace (not in the scheme refers to a normal workplace (not in the scheme refers to a normal workplace (not in the scheme refers to a normal workplace (not in the scheme refers to a normal workplace (not in the scheme refers to a normal workplace (not in the scheme refers to a normal workplace (not in the scheme refers to a normal workplace (not in the scheme refers to a normal workplace (not in the scheme refers to a normal workplace (not in the scheme refers to a normal workplace (not in the scheme refers to a normal workplace (not in the scheme refers to a normal workplace (not in the scheme refers to a normal workplace (not in the scheme refers to a normal workplace (not in the scheme refers to a normal workplace (not in the scheme refers to a normal workplace (not in	WEIGHT OF PART  112.2 Lbs + 101.2 Lbs. / 97 Kg  CITY (maximum force on the carriage IT IS NOT THE WEIGHT OF THE GATE  COMBINABLE COMPONENTS  CGS-345G  MAINTENANCE FREQUENCY  BUSINESS  WAREHOUSE  CONDOMINIUM < 20 UNITS  2 YEAR*  1 YEAR*  Check the functionality and integrity of carriages.  Clean lower area of contact between wheels and rail  Make sure the carriages are integral with the concrete base  Grease the gears with the appropriate grease (FIG.4)  Check gears and racks wear  Check fastening of the locking screws of the rack to the mone of the scheme refers to a normal workplace (not marine or particular contents)

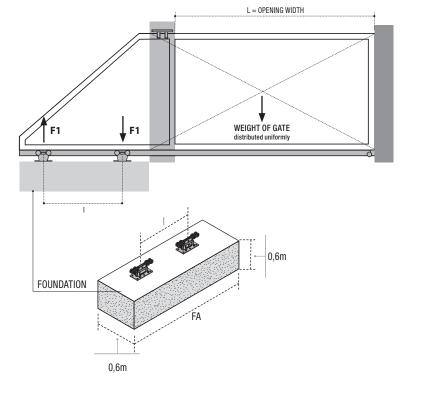



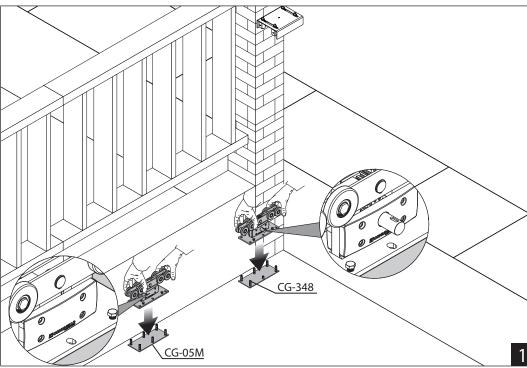

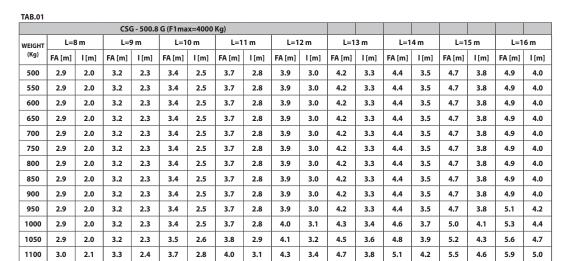

3.3

3.4

4.2

4.3

3.2

3.3

1200

2.3

2.4

3.5

3.6

2.6

2.7

3.8

4.0

2.9

3.1

4.5

4.7

3.6

3.8

4.9

5.1

4.0


4.2

5.3

5.6

4.4

4.7

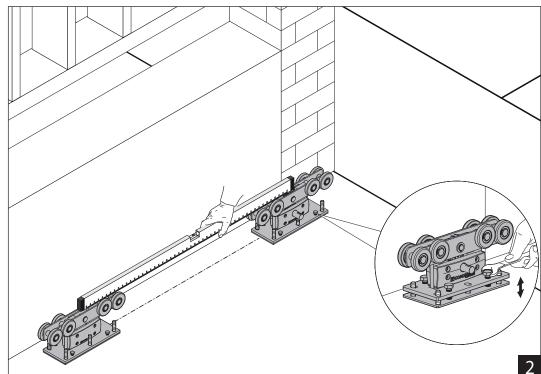

5.7

6.0

4.8


5.1

6.2

6.5

5.3

5.6

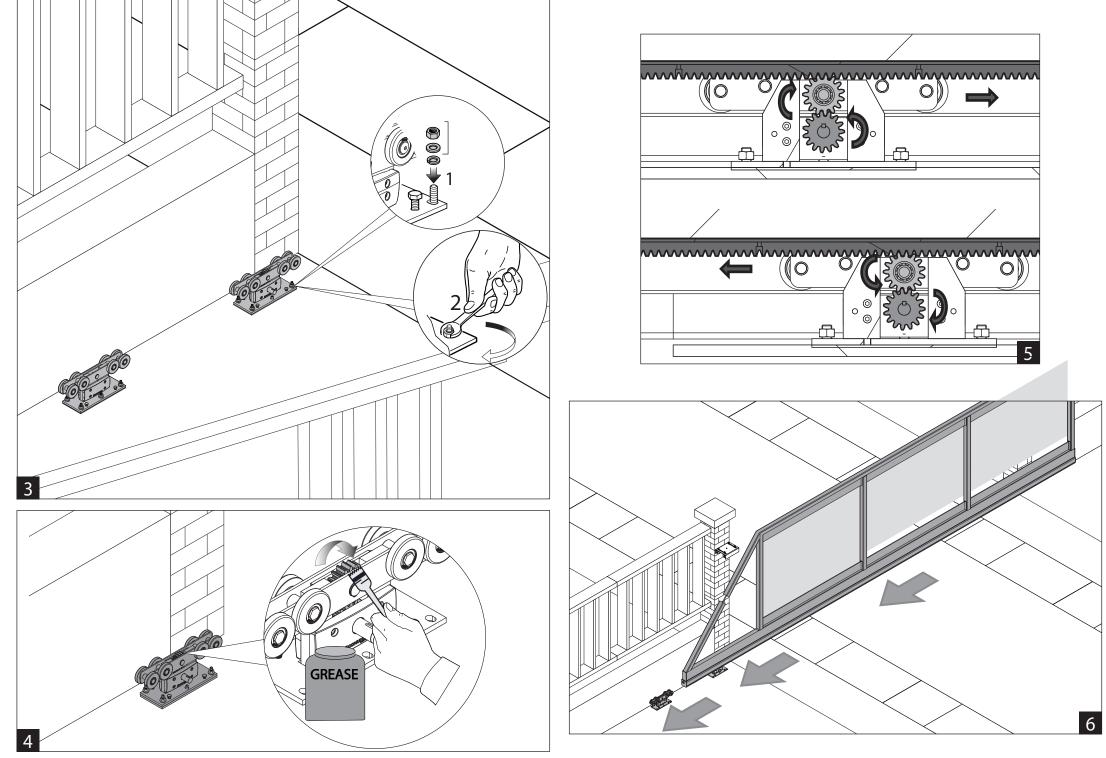

www.CantileverGateParts.com | (800) 878-7829 | Sales@CantileverGateParts.com